



LOADING MAGAZINE

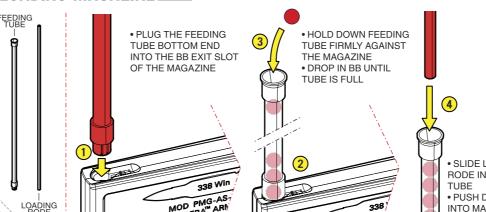




• PUSH DOWN BB INTO MAGAZINE

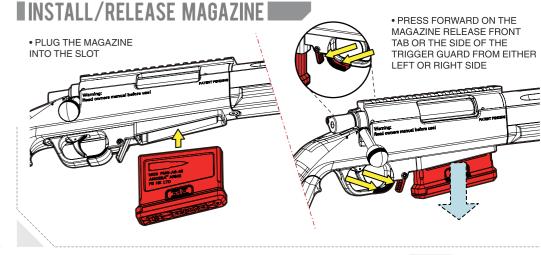

ILOADING OPREATION & LOAD INDICATOR

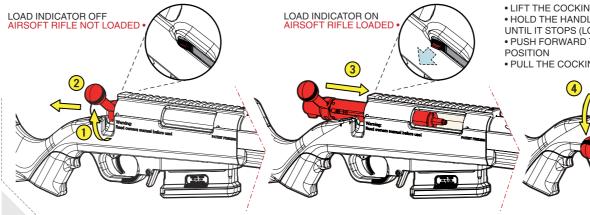


• LIFT THE COCKING HANDLE UPWARD

- HOLD THE HANDLE AND PULL ALL THE WAY BACK UNTIL IT STOPS (LOAD INDICATOR POP OUT)
- PUSH FORWARD THE SPRING BOLT TO ITS ORIGINAL POSITION
- PULL THE COCKING HANDLE BACK DOWN


SWITCH FIRE MODE

SAFE MODE:

- FLIP SWITCH TOWARD THE REAR
- FIRE MODE:
- FLIP SWITCH TOWARD
 THE FRONT

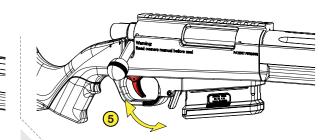

■TO SHOOT

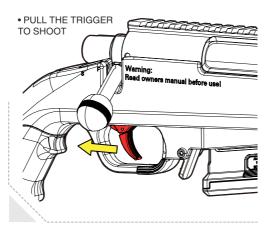


HOP-UP ADJUSTMENT

- USE A HEX KEY TO ADJUST HOP-UP
- DAIL CLOCKWISE FOR MORE HOP-UP
- DAIL COUNTER-CLOCKWISE FOR LESS HOP-UP (HEX KEYS ARE INCLUDED INSIDE PISTOL GRIP)


 Werning Mand Defore used land owners manual before used land ow

REVERSE SLING LOOP POSITION

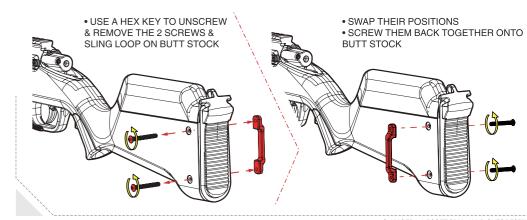

AMOEBA "STRIKER" S2 AIRSOFT SNIPER RIFLE

© AMOEBA AIRSOFT 2016. ALL RIGHTS RESERVED

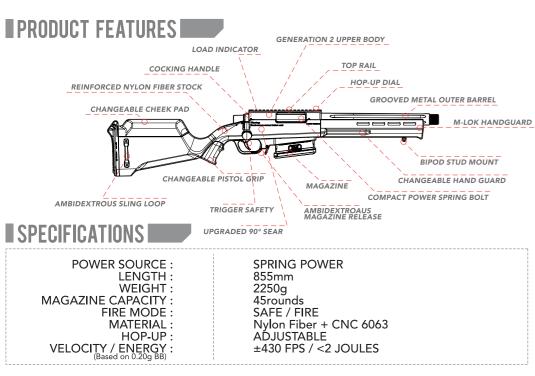

■ SAFETY INSTRUCTIONS

SAFETY CONSIDERATIONS



GENERAL PRECAUTIONS







Divisions of Forever Good (Hong Kong) Ltd.















ARES@ARESAIRSOFT.COM WWW.AMOEBA-AIRSOFT.COM WWW.ARESAIRSOFT.COM **F** AIRSOFTAMOEBA

